

Installation and Operation Manual

SPECIALTY OVENS
Wood Stone Plancha Grill



MODELS

WS-PL-36-37-4-CT

Wood Stone

WOOD STONE CORPORATION
1801 W. Bakerview Rd.
Bellingham, WA 98226 USA

Toll Free (800) 988-8103
Tel (360) 650-1111
Fax (360) 650-1166

www.woodstone-corp.com
Revised February 2010

This page intentionally left blank >



TABLE OF CONTENTS

SAFETY CONSIDERATIONS -----	2
VENTING -----	4
INSTALLATION CLEARANCES -----	5
CONNECTING POWER SUPPLY -----	6
TEMPERATURE CONTROLS -----	7
DAILY USE & MAINTENANCE -----	8
TROUBLESHOOTING -----	9
TEMPERATURE CONTROLS -----	9
ELECTRICAL DIAGRAMS -----	10
LIMITED WARRANTY -----	12



INSTALLATION AND OPERATION MANUAL FOR THE WOOD STONE PLANCHA GRILL

STONE-FIRED COOKING EQUIPMENT

WS-PL MODELS

ADDITIONAL COPIES AVAILABLE UPON REQUEST



WARNING: Please read this entire manual before you install the appliance. Failure to follow instructions may result in property damage, bodily injury or even death.

FOR YOUR SAFETY: Do not store gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.

CAUTION: to reduce the risk of fire, the appliance is to be placed on a surface of non-combustible construction. this non-combustible construction shall in all cases extend not less than 6 inches beyond the equipment on all sides.

Pour réduire les risques d'incendie, l'appareil doit être placé sur une surface de non-combustible. cette non-combustibles, la construction est dans tous les cas pas moins de 6 pouces au-delà de l'équipement de tous les côtés.



INSTALLATION AND OPERATION MANUAL FOR THE WOOD STONE PLANCHA GRILL

DO NOT THROW THIS MANUAL AWAY

RETAIN THIS MANUAL FOR FUTURE REFERENCE

Additional copies of this manual and prompt responses to service/maintenance questions are available from Wood Stone @ 1-800-988-8103.

It is recommended that this appliance be installed,
maintained and serviced by authorized professionals.

WARNING: Improper installation, adjustment, alteration, service or maintenance can result in property damage, injury or death. Read the installation, operation and maintenance instructions thoroughly before installing or servicing this equipment.

Unit Shipping Weight: 480 Lbs.

Please read this entire manual before you install the appliance. Failure to follow instructions may result in property damage, bodily injury or even death.



VENTILATION

This appliance must be installed vented in accordance with NFPA 96 and all relevant national and local codes, subject to the approval of the local authority having jurisdiction.



IF THIS GRILL IS NOT PROPERLY INSTALLED A FIRE MAY RESULT. TO REDUCE THE RISK OF FIRE, FOLLOW THESE INSTALLATION INSTRUCTIONS. A MAJOR CAUSE OF OVEN RELATED FIRES IS FAILURE TO MAINTAIN REQUIRED CLEARANCES (AIR SPACES) TO COMBUSTIBLE MATERIALS. IT IS OF UTMOST IMPORTANCE THAT THIS OVEN BE INSTALLED ONLY IN ACCORDANCE WITH THESE INSTRUCTIONS.

ANY CONSTRUCTION OR MATERIALS WITHIN 12 INCHES OF THE SIDES AND BACK MUST BE NON-COMBUSTIBLE. ALLOW A MINIMUM OF 3 INCHES CLEARANCE TO NON-COMBUSTIBLE CONSTRUCTION TO ALLOW COOLING AIR TO ENTER THE VENTS ON THE SIDES AND BACK OF THE UNIT. DO NOT BLOCK THE AIR VENTS ON THE SIDES, BACK, OR BENEATH APPLIANCE.

WARNING: DO NOT PACK REQUIRED AIR SPACES WITH INSULATION OR OTHER MATERIAL.



UTILITIES SPECIFICATIONS

COUNTER TOP MODELS

Electrical

208 VAC 1 Phase, 11,500 Watts Total, 50/60 Hz

NOTE: This unit comes equipped with 2 power supply cords with NEMA 6-50 plugs that must be connected to 2 individual branch circuits (2 Wire Plus Ground), each rated at 40 amps each.




TEMPERATURE CONTROLS

There are (4) temperature controls on the front of the control box. The (2) controls for the left side of the grill are located to the left of the grease trap drawer (in the center of the front of the control panel). The (2) controls for the right side of the grill are located to the right of the grease trap drawer.

TURNING ON THE HEATING ZONES

To turn on any of the heating elements, press the switch which corresponds to the desired area on the grill surface. **NOTE:** The location of the heating element is etched into the surface above the light. The power switch will be illuminated whenever the zone is turned on.

Turn the knob to the desired temperature setting. The indicator light above the switch will be illuminated when there is power being supplied to the heating elements. The light will go off when the zone reaches its set temperature.

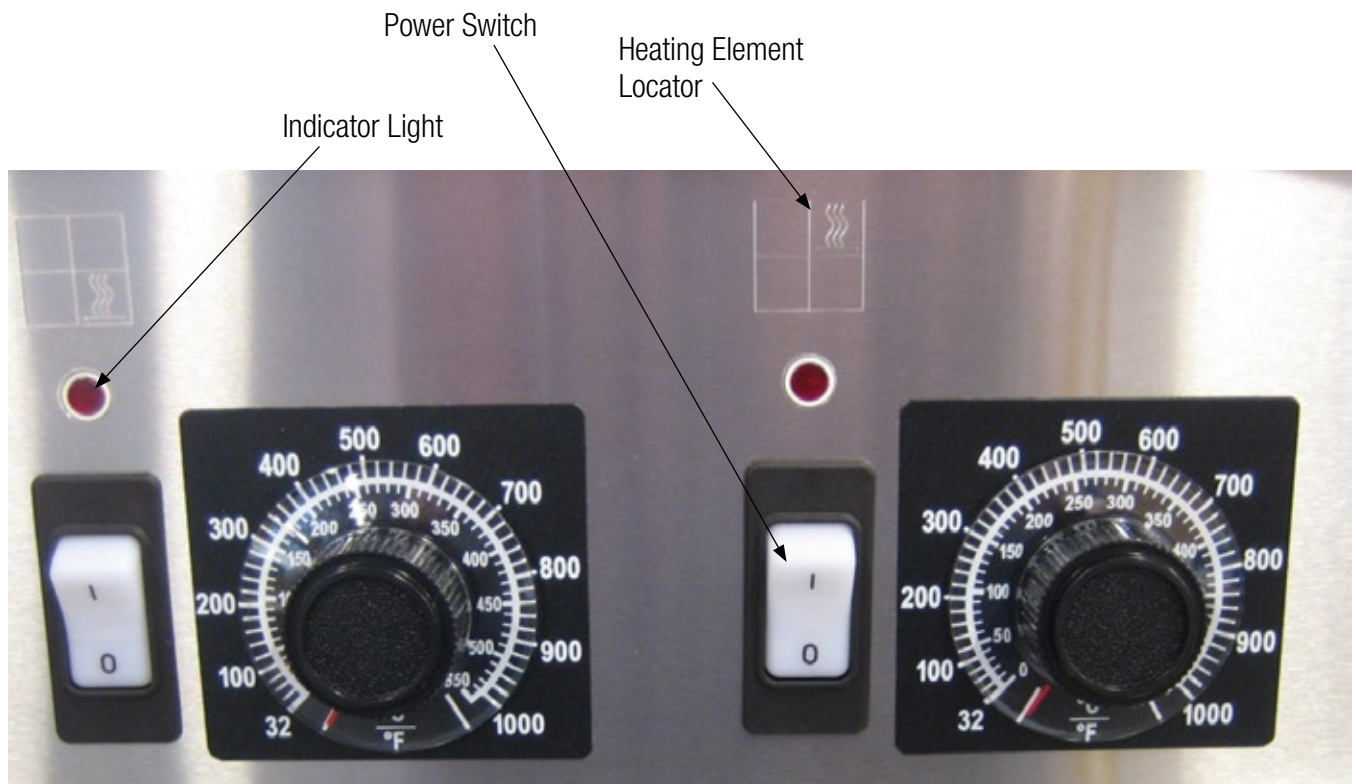



DAILY USE AND MAINTENANCE

1. Check the grease/debris tray frequently throughout the day. Keep the drain clear and do not allow the tray to overflow.

2. The cooking surface should be wiped periodically through the day using a damp towel.

CAUTION: COOK SURFACE IS VERY HOT. Use a spatula or other appropriate tool to move the towel around the cook surface when cleaning. If needed, you may use a suitable scraper or abrasive pad to clean stubborn residues from the cook surface. Scratches or other damage to the cook surface caused by improper use of scrapers etc. are not covered by the WARRANTY.

3. Keep the external surfaces of the appliance clean and free of grease and dust build up. **DO NOT** use excessive amounts of water to clean the appliance. A damp cloth and a mild detergent is sufficient. **DO NOT USE** any type of scouring pad on the stainless steel exterior as this can scratch the surface. Be careful when cleaning the front panel area.

4. Cooling fans. This appliance is equipped with two cooling fans, that pull air from the underside of the front control box area. It is critical that this area be kept clear and cleaned regularly to prevent the cool air intake from being blocked.

5. Cooling vents on sides, back and underneath of the appliance. The Plancha Grill is capable of extremely high temperatures, much higher than a conventional electric grill. To ensure the reliability of the electrical components cooling vents are provided on the appliance. These vents must not be blocked, and must be kept clean.

6. Over-temp warning light. This appliance is equipped with a warning light on the front panel to warn of an over temperature condition in the front control box. If at any time this light is illuminated, turn off all heating zones and disconnect the appliance from the incoming power. Then check to make sure that none of the air vents on the appliance are blocked,, especially the perforated air intakes for the cooling fans on the underside of the appliance at the front. If any vents are blocked, correct the situation, and return the appliance




TROUBLE SHOOTING ITEMS

1. OVER-TEMP WARNING LIGHT: This appliance is equipped with a warning light on the front panel to warn of an over temperature condition in the front control box. If at any time this light is illuminated, turn off all heating zones and disconnect the appliance from the incoming power. Then check to make sure that none of the air vents on the appliance are blocked,, especially the perforated air intakes for the cooling fans on the underside of the appliance at the front. If any vents are blocked, correct the situation and resume using the appliance.


IF THE OVER-TEMP LIGHT COMES BACK ON AT ANY TIME TURN ALL ZONES OFF, DISCONNECT THE POWER SUPPLY AND CONTACT THE WOOD STONE SERVICE DEPARTMENT.

If the over-temp light has come on and all vents are found to be clear, CONTACT THE WOOD STONE SERVICE DEPARTMENT FOR ASSISTANCE.

2. ONLY TWO ZONES WORKING: This appliance requires two power supplies. Make sure both circuits supplying the appliance are turned on, and make sure both power cords are plugged in (when applicable).

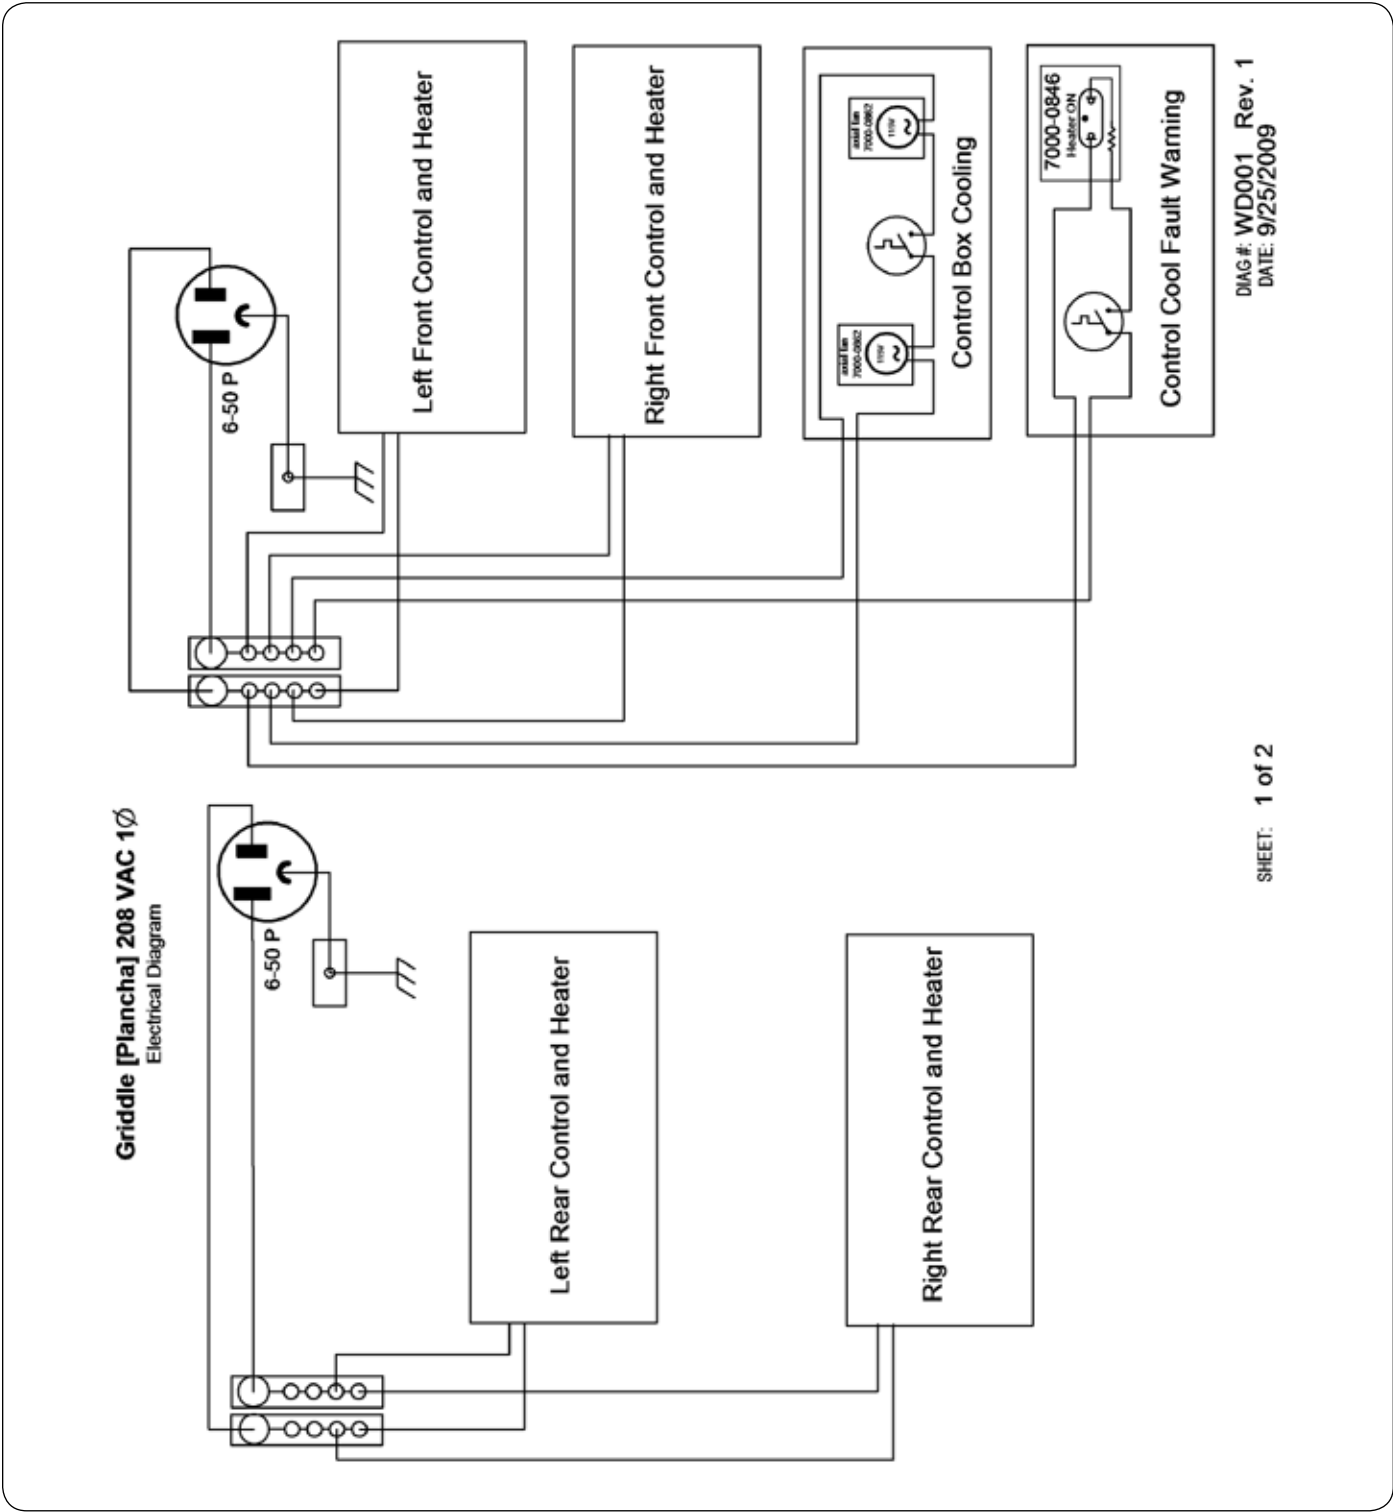

Griddle [Plancha] 208 VAC 1Ø
Electrical Diagram

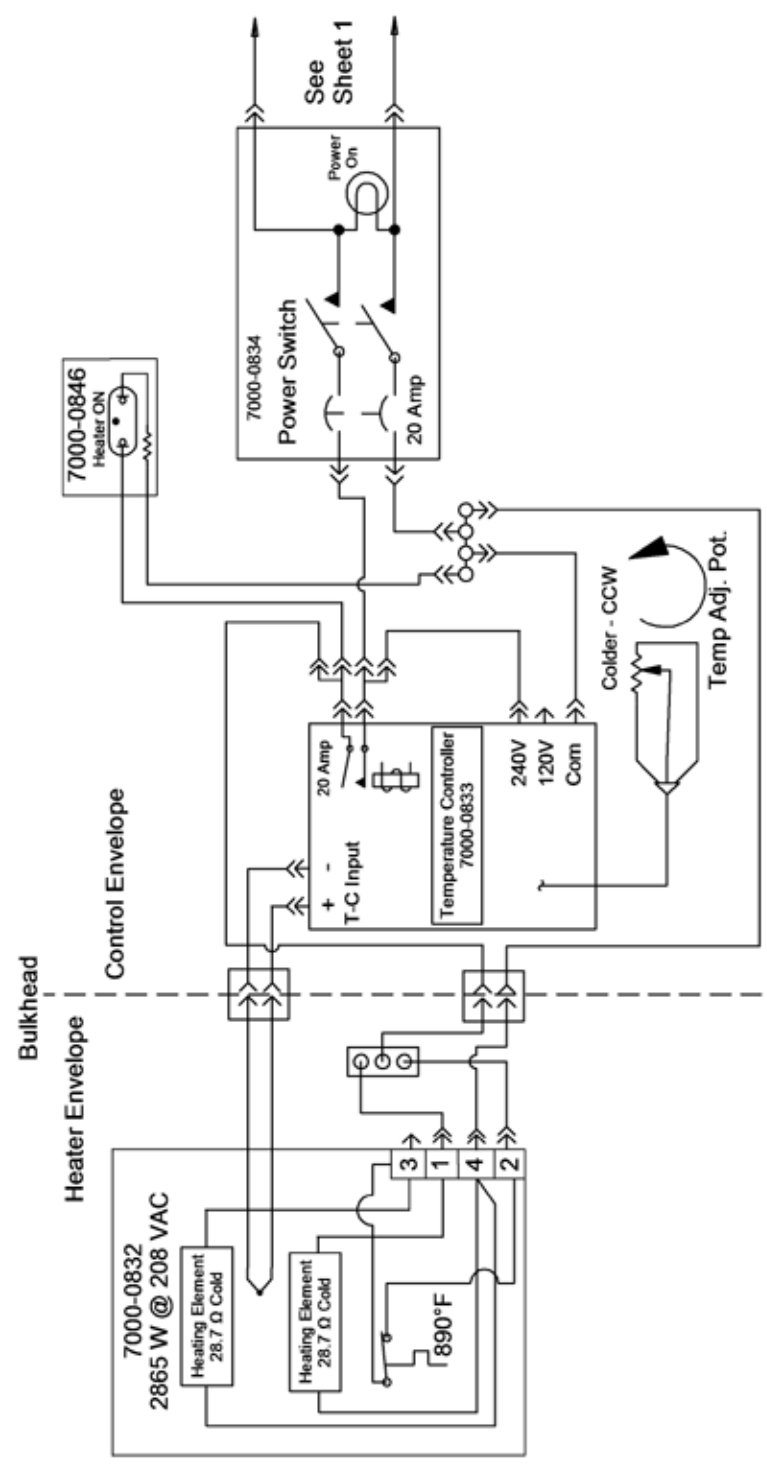

Typical: All Control and Heater Blocks

DIAG #: WD001 Rev. 1
DATE: 9/25/2009

SHEET: 2 of 2



**ALL WARRANTY SERVICE MUST BE PRE-APPROVED BY WOOD STONE
PLEASE CONTACT THE FACTORY FIRST**

Please call 1-800-988-8103 or 1-360-650-1111 seven days a week. Our normal business hours are 8am to 4:30pm Pacific Standard time Monday through Friday. If calling during non-business hours, follow the recorded instructions for emergency service and a Wood Stone technician will get back to you promptly. Wood Stone warrants its equipment to the original purchaser against defects in material or manufacture for a period of one year from the original date of purchase subject to the following exclusions and limitations.

EXCLUSIONS

The warranties provided by Wood Stone do not apply in the following instances:

1. In the event that the equipment is improperly installed. Proper installation is the responsibility of the installer; proper installation procedures are prescribed by the Wood Stone installation manual.
2. In the event the equipment is improperly maintained. Proper maintenance is the responsibility of the user; proper maintenance procedures are prescribed in the Wood Stone installation manual.
3. In the event that the failure or malfunction of the appliance or any part thereof is caused by abnormal use or is otherwise not attributable to defect in material or manufacture.
4. In the event that the appliance, by whatever cause, has been materially altered from the condition in which it left the factory.
5. In the event that the rating plate has been removed, altered or obliterated.
6. On parts that would be normally worn or replaced under normal conditions.
7. Scratches or damage to the grill surface due to improper cleaning or normal wear and tear.

If any oral statements have been made regarding this appliance, such statements do not constitute warranties and are not part of the contract of sale. This Limited Warranty constitutes the complete, final and exclusive statement with regard to warranties.

THIS LIMITED WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES WHETHER WRITTEN, ORAL OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR PARTICULAR PURPOSE OR WARRANTY AGAINST LATENT DEFECTS

LIMITATIONS OF LIABILITY:

In the event of warranty claim or otherwise, the sole obligation of Wood Stone shall be the repair and/or replacement, at the option of Wood Stone, of the appliance or component or part thereof. Such repair or replacement shall be at the expense of Wood Stone with the exception of travel over 100 miles or two hours, overtime, and holiday charges which shall be at the expense of the purchaser. Any repair or replacement under this warranty does not constitute an extension of the original warranty for any period of the appliance or for any component or part thereof. Parts to be replaced under this warranty will be repaired or replaced at the option of Wood Stone with new or functionally operative parts. The liability of Wood Stone on any claim of any kind, including claims based on warranty, expressed or implied, contract, negligence, strict liability or any other theories shall be solely and exclusively the repair or replacement of the product as stated herein, and such liability shall not include, and purchaser specifically renounces any rights to recover, special, incidental, consequential or other damages of any kind whatsoever, including, but not limited to, injuries to persons or damage to property, loss of profits or anticipated profits, or loss of use of the product.

TO SECURE WARRANTY SERVICE:

If you claim a defect covered by this Limited Warranty, direct your claim to:
Wood Stone Corporation 1801 W. Bakerview Rd. Bellingham, WA 98226 USA Attn: National Service Manager